


# Prática

SPEED OVEN

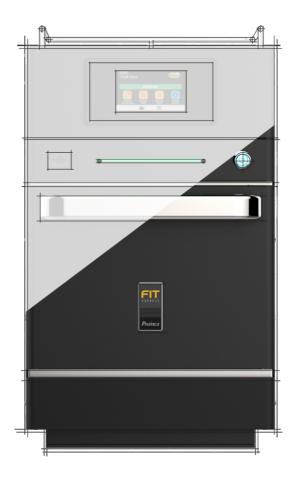



INSTALLATION AND OPERATION MANUAL

#### **CUSTOMER LETTER**

For us, your choice of a Prática product is a reason for great satisfaction.

This reinforces the meaning of our mission, which is to bring quality and productivity to the food preparation environment with the purpose of providing conditions for the preparation of good, quality food without waste.

To that end, our products offer high technology and the best quality standards. They are developed by an experienced and highly qualified team, and produced in a manufacturing plant with the most advanced processes and equipment.

Prática offers complete solutions to the whole food preparation chain. From bakery products to the entire culinary universe. From pre-prep to conservation, finishing and decoration. Prática offers a wide range of baking machines, deep-freezing and conservation equipment, and a wide range of ovens for baking, cooking, and quick finishing, as well as a full range of diverse accessories.

We hope that our products, accessories and pre- and post-sale services can be valuable tools for the success of your business and the continuity of our partnership.

Thank you.

This manual contains all the information you need to install and use your equipment correctly and achieve the best results in performance, quality and safety.

We recommend that you read and follow all guidelines contained therein and keep it in a suitable place for future reference at all times.

# **CONTENTS**

IMPORTANT SAFETY INSTRUCTIONS	
Recommendations For Use	80
Use Restrictions	10
General Cleaning Recommendations	10
Safety Risk: Cleaning Chemicals	11
Safety Risk: Heating	11
Safety Risk: Electrical Power	12
Suitable Utensils	13
Combination of Suitable Utensils	13
PRECAUTIONS TO AVOID POTENTIAL EXPOSURE TO EXCE	SSIVE MICROWAVE
ENERGY	14
IDENTIFICATION OF SYMBOLS USED IN THIS MANUAL	15
WARRANTY	
Term and Details	16
Reasons to Void a Warranty	17
Notes and Recommendations	18
INSTALLATION INSTRUCTIONS	
Electrical Installation	
General Instructions	
Dimensions	
General Recommendations	23
FIT EXPRESS TECHNOLOGY	24
OPERATING PRINCIPLES	25
RECIPE CREATION	27
OPERATING INSTRUCTIONS	
Pre-heating	28
Executing a recipe	
Accessing the Options	
User Settings	
• Edit Groups	
Edit Group Name	
Edit group icon	
Delete recipes in a group	

# **OPERATING INSTRUCTIONS**

- Arrange Group.         35           - Set Group Temperature.         40           - Edit Recipes.         40           - Edit Recipe Name.         42           - Edit Recipe steps.         44           - Edit recipe steps.         44           - Delete Recipe.         47           - Arrange Recipes.         46           - Cook/Brown More.         49           - Add/Remove Favorites.         50           - Pre-heat.         52           - Current temperature.         53           - Celsius/Fahrenheit.         53           - USB.         54           - WiFI.         56           - Web App-IOK - Internet Of Kitchen.         56           - Web App-IOK - Internet Of Kitchen.         56           - Export Menu.         60           System.         60           - Language.         61           - Language.         61           - Language.         61           - Language Password.         62           - Restore Original Settings.         63           - Edit Access.         65           - Information from the Manufacturer.         65           - System Update.         66	Delete Group	
Edit Recipe Name       40         Edit Recipe Name       42         Edit Recipe Image       42         Edit recipe steps       44         Edit recipe steps       44         Delete Recipe       47         Arrange Recipes       48         Cook/Brown More       48         Add/Remove Favorites       50         Pre-heat       52         Current temperature       52         Celsius/Fahrenheit       55         USB       54         WiFI       56         Web App-IOK-Internet Of Kitchen       55         Web App-IOK-Internet Of Kitchen       55         Export Menu       60         System       60         Language       61         Language       61         Change Password       62         Restore Original Settings       63         Edit Access       63         Information from the Manufacturer       65         System Update       70         Volume       65         Network Settings       65         Favorites       70         Sound alarms       70         Manual Mode       71	Arrange Group	39
Edit Recipe Image.       42         Edit Recipe Image.       43         Edit recipe steps.       44         Delete Recipe.       47         Arrange Recipes.       48         Cook/Brown More.       49         Add/Remove Favorites.       50         Pre-heat.       52         Current temperature.       52         Celsius/Fahrenheit.       55         USB.       54         Wi-Fi.       56         Web App-10K-Internet Of Kitchen.       56         Customer Support.       55         Export Menu.       60         System.       60         Language.       61         Date/Time.       61         Change Password.       62         Restore Original Settings.       63         Edit Access.       63         Information from the Manufacturer.       65         System Update.       66         Volume.       65         Network Settings.       65         Favorites.       70         Sound alarms.       77         Manual Mode.       71         CLEANING       80         Daily Cleaning Procedure Guide.		
Edit Recipe Image.       42         Edit Recipe Image.       43         Edit recipe steps.       44         Delete Recipe.       47         Arrange Recipes.       48         Cook/Brown More.       49         Add/Remove Favorites.       50         Pre-heat.       52         Current temperature.       52         Celsius/Fahrenheit.       55         USB.       54         Wi-Fi.       56         Web App-10K-Internet Of Kitchen.       56         Customer Support.       55         Export Menu.       60         System.       60         Language.       61         Date/Time.       61         Change Password.       62         Restore Original Settings.       63         Edit Access.       63         Information from the Manufacturer.       65         System Update.       66         Volume.       65         Network Settings.       65         Favorites.       70         Sound alarms.       77         Manual Mode.       71         CLEANING       80         Daily Cleaning Procedure Guide.	• Edit Recipes	40
Edit Recipe Image.       45         Edit recipe steps.       44         Delete Recipe.       47         Arrange Recipes.       48         Cook/Brown More.       49         Add/Remove Favorites.       50         Pre-heat.       52         Current temperature.       53         Celsius/Fahrenheit.       53         USB.       54         Wii-Fi.       56         Web App-10K-Internet Of Kitchen.       56         Customer Support.       55         Export Menu.       60         System.       60         Language.       61         Date/Time.       61         Change Password.       62         Restore Original Settings.       63         Edit Access.       63         Information from the Manufacturer.       65         System Update.       66         Volume.       69         Network Settings.       69         Favorites.       70         Sound alarms.       70         Manual Mode.       71         CLEANING       80         Daily Cleaning Procedure Guide.       80         LIGHTBAR (LED). <t< td=""><td></td><td></td></t<>		
Edit recipe steps.       44         Delete Recipe.       47         Arrange Recipes.       48         Cook/Brown More.       49         Add/Remove Favorites.       50         Pre-heat.       52         Current temperature.       53         Celsius/Fahrenheit.       53         USB.       54         WiFI.       56         Web App-10K-Internet Of Kitchen.       56         Customer Support.       55         Export Menu.       60         System.       60         Language.       61         Date/Time.       61         Change Password.       62         Restore Original Settings.       63         Edit Access.       63         Information from the Manufacturer.       65         System Update.       66         Volume.       66         Network Settings.       66         Favorites.       70         Sound alarms.       70         Manual Mode.       71         CLEANING       70         Daily Cleaning Procedure Guide.       74         Catalytic Converter Cleaning Guide.       80         LIGHTBAR (LED)		
- Delete Recipe.       47         - Arrange Recipes.       48         - Cook/Brown More.       49         - Add/Remove Favorites.       50         - Pre-heat.       52         - Current temperature.       53         - Celsius/Fahrenheit.       53         - USB.       54         - Wil-Fi.       56         - Web App - IOK - Internet Of Kitchen.       58         - Customer Support.       59         - Export Menu.       60         System.       60         - Language.       61         - Date/Time.       61         - Change Password.       62         - Restore Original Settings.       63         - Edit Access.       63         - Information from the Manufacturer.       65         - System Update.       66         - Volume.       65         Network Settings.       66         Favorites.       70         Sound alarms.       70         Manual Mode.       71         CLEANING       80         Daily Cleaning Procedure Guide.       74         Catalytic Converter Cleaning Guide.       80         Air Filter Cleaning Guide.		
* Arrange Recipes.       48         * Cook/Brown More.       49         * Add/Remove Favorites.       50         * * * * * * * * * * * * * * * * * * *		
• Cook/Brown More.       49         • Add/Remove Favorites.       50         • Pre-heat.       52         • Current temperature.       53         • Celsius/Fahrenheit.       53         • USB.       54         • Wi-Fi.       56         • Web App - IOK - Internet Of Kitchen.       56         • Customer Support.       59         • Export Menu.       60         System.       60         • Language.       61         • Date/Time.       61         • Change Password.       62         • Restore Original Settings.       63         • Edit Access.       63         • Information from the Manufacturer.       65         • System Update.       66         • Volume.       69         Network Settings.       50         Favorites.       70         Sound alarms.       70         Manual Mode.       71         CLEANING       36         Daily Cleaning Procedure Guide.       74         Catalytic Converter Cleaning Guide.       80         Air Filter Cleaning Guide.       80         LIGHTBAR (LED).       81         ALERTS AND ERRORS: POSSIBLE SOLU		
• Add/Remove Favorites       50         • Pre-heat       52         • Current temperature       53         • Celsius/Fahrenheit       53         • USB       54         • Wi-Fi       56         • Web App - IOK - Internet Of Kitchen       58         • Customer Support       59         • Export Menu       60         System       60         • Language       61         • Date/Time       61         • Change Password       62         • Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       66         Network Settings       65         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       71         Daily Cleaning Procedure Guide       80         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         Air Filter Cleaning Guide       80         Alerts       82         Errors       83		
• Pre-heat       52         • Current temperature       53         • Celsius/Fahrenheit       53         • USB       54         • Wi-Fi       56         • Web App - IOK - Internet Of Kitchen       58         • Customer Support       55         • Export Menu       60         System       60         • Language       61         • Date/Time       61         • Change Password       62         • Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       65         Network Settings       66         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       30         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
• Current temperature       53         • Celsius/Fahrenheit       53         • USB       54         • Wi-Fi       56         • Web App - IOK - Internet Of Kitchen       58         • Customer Support       59         • Export Menu       60         System       60         • Language       61         • Date/Time       61         • Change Password       62         • Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       63         • System Update       66         • Volume       69         Network Settings       69         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       30         Baily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
• Celsius/Fahrenheit.       55         • USB.       54         • Wi-Fi.       56         • Web App - IOK - Internet Of Kitchen.       58         • Customer Support.       55         • Export Menu.       60         System.       60         • Language.       61         • Date/Time.       61         • Change Password.       62         • Restore Original Settings.       63         • Edit Access.       63         • Information from the Manufacturer.       65         • System Update.       66         • Volume.       69         Network Settings.       69         Favorites.       70         Sound alarms.       70         Manual Mode.       71         CLEANING       70         Daily Cleaning Procedure Guide.       74         Catalytic Converter Cleaning Guide.       80         LIGHTBAR (LED).       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts.       82         Errors.       83		
• WISB.       54         • WiFFi.       56         • Web App - IOK - Internet Of Kitchen.       58         • Customer Support.       59         • Export Menu.       60         System.       60         • Language.       61         • Date/Time.       61         • Change Password.       62         • Restore Original Settings.       63         • Edit Access.       63         • Information from the Manufacturer.       65         • System Update.       66         • Volume.       69         Network Settings.       69         Favorites.       70         Sound alarms.       70         Manual Mode.       71         CLEANING       70         Daily Cleaning Procedure Guide.       74         Catalytic Converter Cleaning Guide.       80         Air Filter Cleaning Guide.       80         LIGHTBAR (LED).       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts.       82         Errors.       83		
• Wi-Fi.       56         • Web App - IOK - Internet Of Kitchen.       58         • Customer Support.       59         • Export Menu.       60         System       60         • Language       61         • Date/Time       61         • Change Password       62         • Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       69         Network Settings       69         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
• Web App - IOK - Internet Of Kitchen       58         • Customer Support       59         • Export Menu       60         System       60         • Language       61         • Date/Time       61         • Change Password       62         • Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       69         Network Settings       56         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       70         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
• Customer Support.       55         • Export Menu.       60         System.       60         • Language.       61         • Date/Time.       61         • Change Password.       62         • Restore Original Settings.       63         • Edit Access.       63         • Information from the Manufacturer.       65         • System Update.       66         • Volume.       69         Network Settings.       69         Favorites.       70         Sound alarms.       70         Manual Mode.       71         CLEANING       70         Daily Cleaning Procedure Guide.       72         Catalytic Converter Cleaning Guide.       80         Air Filter Cleaning Guide.       80         LIGHTBAR (LED).       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts.       82         Errors.       83		
• Export Menu       60         System       60         • Language       61         • Date/Time       61         • Change Password       62         • Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       69         Network Settings       69         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
System		
• Language	•	
• Language	System	60
• Date/Time       61         • Change Password       62         • Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       69         Network Settings       70         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
• Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       69         Network Settings       69         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83	· ·	
• Restore Original Settings       63         • Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       69         Network Settings       69         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
• Edit Access       63         • Information from the Manufacturer       65         • System Update       66         • Volume       69         Network Settings       70         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
<ul> <li>Information from the Manufacturer</li></ul>	• Edit Access	63
• System Update       66         • Volume       69         Network Settings       69         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
• Volume		
Network Settings       69         Favorites       70         Sound alarms       70         Manual Mode       71         CLEANING       74         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83		
Favorites		
Sound alarms         70           Manual Mode         71           CLEANING         72           Daily Cleaning Procedure Guide         74           Catalytic Converter Cleaning Guide         80           Air Filter Cleaning Guide         80           LIGHTBAR (LED)         81           ALERTS AND ERRORS: POSSIBLE SOLUTIONS         82           Alerts         82           Errors         83	Network Settings	69
Manual Mode       71         CLEANING       74         Daily Cleaning Procedure Guide       74         Catalytic Converter Cleaning Guide       80         Air Filter Cleaning Guide       80         LIGHTBAR (LED)       81         ALERTS AND ERRORS: POSSIBLE SOLUTIONS         Alerts       82         Errors       83	Favorites	70
CLEANING Daily Cleaning Procedure Guide	Sound alarms	70
Daily Cleaning Procedure Guide	Manual Mode	71
Daily Cleaning Procedure Guide		
Catalytic Converter Cleaning Guide		
Catalytic Converter Cleaning Guide	Daily Cleaning Procedure Guide	74
LIGHTBAR (LED)	Catalytic Converter Cleaning Guide	80
ALERTS AND ERRORS: POSSIBLE SOLUTIONS Alerts	Air Filter Cleaning Guide	80
ALERTS AND ERRORS: POSSIBLE SOLUTIONS Alerts		
Alerts         82           Errors         83	LIGHTBAR (LED)	81
Alerts         82           Errors         83		
Errors83		
Table of Alerts and Errors84	Errors	83
	Table of Alerts and Errors	84

#### IMPORTANT SAFETY INSTRUCTIONS

#### **RECOMMENDATIONS FOR USE**

- Oven operation: It is recommended that the oven operator always wear thermal protective gloves and aprons (PPEs) to avoid burns caused by hot internal parts of the oven and from any spillage of tray contents.
- Using the Dashboard: The panel should only be operated with your fingers, and the use of any instrument may damage the equipment and put the safety operator at risk.
- This equipment features **Ventless** technology that does not require the use of exhaust hoods and ventilation systems.
- The **Ventless** system uses a catalytic filter that can be removed by the operator for cleaning.

**CAUTION:** To avoid burns, do not use containers loaded with liquids or kitchen products that become liquid by heating at levels higher than can be easily observed. **The sticker (as shown aside) is attached to the manual and must be inserted in the front when installing the equipment at a minimum height of 5.2 ft / 1,60m above the floor.** 



- Read all instructions before using the equipment.
- Read and follow the specific PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY found on page 14.
- This equipment must be grounded. Connect only to properly grounded outlet. See GROUNDING INSTRUCTIONS found on *page 20*.
- Install or locate this equipment only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers for example, closed glass jars can explode and should not be heated in this oven.
- Use this equipment only for the functions described in this manual.
- WARNING: Do not use corrosive chemicals or vapours in this device. This type of oven is specifically designed to heat, regenerate, gratin, or finish food that has already undergone some cooking process. Not suitable for cooking food or products in general. It is not designed for industrial or laboratory use.
- HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE. Use caution when removing hot items.

- CAUTION: Do not use Speed Ovens to prepare food classified as "raw proteins," chicken skin, raw bacon, raw burger, etc. This can damage the catalytic converter and void the warranty.
- CAUTION: Failure to maintain the equipment in clean condition may lead to surface deterioration, which may adversely affect the life of the equipment and possibly result in a hazardous situation.
- Remove wires used to close paper or plastic bags that will be inserted into the oven. Do not use plastic utensils.
- It is recommended that children be supervised to ensure they do not play with the equipment.
- Do not operate the oven if it is damaged or if the oven door does not close properly.
- Do not place any objects between the door and the oven stop.
- Do not use water jet for cleaning.
- Do not clean this equipment with a steam cleaner.
- The oven shall have a dedicated circuit breaker.
- Do not wet the power cord or socket.
- Keep the power cord away from heated surfaces.
- If the power cord is damaged, it shall be replaced by the manufacturer, authorized technician, or a qualified person in order to avoid hazards.
- $\bullet \ \ Only \ authorized \ technicians \ should \ open \ the \ equipment \ panel.$
- Do not use plastic utensils.
- Do not use the microwave function without food inside. This may damage the equipment.
- Do not operate the equipment with the door open as this may result in exposure to microwave energy.
- Do not allow food residues or other debris to build up on the door surface and the hinge so as not to impair the oven seal.
- Foods with skin, peel, or membrane, such as: tomatoes, potatoes, sausages, and peppers shall be pierced with a fork before being put inside the oven, as they may explode.
- Check the temperature of heated food before serving to avoid burns.
- Shake and check the temperature of the contents of baby feeding bottles and bowls before consumption to avoid burns.

- Fully closed packages should not be heated in the oven, as they may explode.
- Minimum clearance above the microwave oven should be 5.9 in /150mm In the case of ovens that allow stacking (1+1), this distance should be measured from the top oven).
- The oven shall be cleaned on a daily basis and any food build-up must be removed.
- When heating liquids using only microwave or a combined function, the contents should be stirred to prevent eruptive boiling. Heating beverages in the microwave oven may result in delayed eruption, therefore care should be taken when handling the container.
- Remove any excess fat after cooking/roasting/processing and before lifting heavy containers from the oven.
- When heating food in paper containers, pay attention to the oven due to the possibility of combustion/ignition.
- Food in combustible paper or plastic containers shall be transferred to a microwave-proof container that withstands the pre-heating temperature, to avoid the possibility of combustion/ignition.
- If glass breaks inside the oven, discard the food that was in the oven at the time of the breakage.

#### **RESTRICTIONS OF USE**

- Use only utensils suitable for use in microwave ovens as per *page 13*.
- Never use the equipment to heat alcohol, brandy, rum, etc.
- Alcohol can catch fire more easily if overheated. Use caution and do not leave the equipment unattended.
- If smoke is observed: Turn the equipment off. Disconnect or insulate from power and keep the door closed to smother the flames.

#### GENERAL CLEANING RECOMMENDATIONS

- The equipment's cooking chamber shall be cleaned on a daily basis. Failure
  to maintain the equipment daily schedule lead to surface deterioration,
  which may adversely affect the life of the equipment and possibly result in a
  hazardous situation.
- The equipment shall be disconnected from the mains during maintenance and parts replacement. It is not necessary to disconnect the equipment from the power supply during the daily cleaning.

# **SAFETY RISK: CLEANING CHEMICALS**

DANGER	WHERE OR IN WHAT SITUATIONS DOES THE DANGER ARISE?	PREVENTIVE ACTION
There is risk of chemical burns or irritation of the skin, eyes and respiratory system due to contact with cleaning chemicals and their fumes.	For all cleaning actions.	Do not allow cleaning chemicals to come in contact with your skin or eyes.      Do not heat the equipment if cleaning chemicals are inside.      Do not breathe the chemical spray.      Wear personal protective equipment (PPE).       Strictly follow the steps for cleaning, as per Daily Cleaning topic.

# **SAFETY RISK: HEATING**

DANGER	WHERE OR IN WHAT SITUATIONS DOES THE DANGER ARISE?	PREVENTIVE ACTION
There is risk of burns from hot surfaces.	Within the entire chamber, including all parts that are or were inside during cooking, such as:  Racks; -Containers; -Roasting pans.	*Before starting the cleaning tasks, wait until the chamber has cooled below 50°C/122°F.
	On the inside of the equipment door.	Wear personal protective clothing and equipment (PPE) as instructed in page 08.

# **SAFETY RISK: ELECTRICAL POWER**

DANGER	WHERE OR IN WHAT SITUATIONS DOES THE DANGER ARISE?	PREVENTIVE ACTION
There is risk of electric shock from energized parts.	•Below the side and top panels; •In the display panel; •Along the power cord.	•Any work on the electrical system should be performed only by qualified electricians from an authorized service company.  •Make sure that all electrical connections are in perfect condition and secure before putting the equipment into use.
	On the equipment and adjacent metal parts.	-Before preparing the equipment for use, make sure that the equipment is connected to an equipotential offset system (EU).
	If the equipment on wheeled supports starts to move accidentally and the power supply is switched off.	When operating the equipment, always engage the safety lock on the wheels.  Check if the wheel locks are engaged on a daily basis before starting operation.
Risk of electric shock caused by a short circuit.	If the equipment comes in contact with water.	•Do not flush the outer box with water.  •Always keep the USB cover closed during cleaning.

## **SUITABLE UTENSILS**

Check the manufacturer's instructions and the temperature rating to determine the suitability of individual containers and accessories for use with the oven. The table below provides general guidelines:

SUITABLE COOKWARE	ALLOWED	PREVENTIVE ACTION
HEAT-RE	SISTANT CON	TAINERS
Tempered glass.		
Compatible ceramics.		Do not use items with metallic decoration.
Clayware (china, etc.)  Note: The content of mineral in the utensil may affect the performance of the equipment.	YES	
SHEET	AND METAL	TRAYS
Any metal or foil containers.	NO	
PLASTIC CONTAINERS		
Plastic containers.	NO	
	DISPOSABLES	
Fuels (paper, cardboard, etc.).	YES	Use only disposables suited to the temperatures reached by the oven (280°C / 536°F).
0	THER UTENSII	LS
Ties and labels.		
Cutlery.	NO	During the cooking process, no tools such as probes, cutlery, ties and labels should be inside the oven.
Temperature probes.		

## **COMBINATION OF SUITABLE UTENSILS**

COMBINATION OF SUITABLE UTENSILS	ALLOWED
Speed Grill	YES
Speed Grill + Solid Ptfe Basket	YES
Speed Grill + Wave Tray	YES
Teflon accessories	YES

#### CAUTION!

 This equipment is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or persons with a lack of experience and knowledge, unless they have been instructed on how to use the equipment or are under the supervision of a person responsible for their safety.



• Do not use the oven handle to move the equipment. Only move the oven by its sides.



 Do not use the equipment door as a support. This will cause the door to become uneven and the equipment to malfunction.



• Using the door for any other purpose than those described herein may result in voiding the warranty.

# PRECAUTIONS TO AVOID POTENTIAL EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open, as it may result in harmful exposure to microwave energy. It is important to not override or manipulate the safety interlocks.
  - (b) Do not place any objects between the front face of the oven and the door, or allow dirt or cleaning residues to build up on the sealing surfaces.
- (c) Do not use the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) Door (tilted); (2) Hinges and latches (broken or loose); (3) Door seals and sealing surfaces.
  - (d) The oven shall not be adjusted or repaired by any person other than qualified service personnel.
- (e) WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of any cover which gives protection against exposure to microwave energy (IEC 60335-2-90.2015).

## **IDENTIFICATION OF SYMBOLS USED IN THIS MANUAL**



DANGER! RISK THAT MAY CAUSE SERIOUS INJURY OR DEATH



**ALERT** 



FIRE HAZARD



MICROWAVE SYMBOL



ELECTRICAL SHOCK HAZARD



**BURN HAZARD** 



RISK OF BURN BY HOT LOAD SPILL



**GROUNDING SYMBOL** 



**EQUIPOTENTIAL SYMBOL** 



TIPS AND INFORMATION ABOUT USE

#### WARRANTY

#### **TERM AND DETAILS**

- **a)** Prática equipment has 1 (one) year of warranty for parts and labor, and 2 (two) years only for replacement of parts (excludes labor): Bottom/Top heating element, chamber heating element, Magnetron, and Blower motor; as of the date of issue of the sales invoice, exclusively for the first end purchaser. If for any reason the purchase invoice is lost, the start date of the warranty will prevail as the date of billing by Prática Products Inc reseller.
- **b)** Regardless of the equipment's actual installation or period of use, the warranty period starts in the date when the sales invoice was issued.
- **c)** For the installation of High Speed Oven Prática, the customer should directly contact their responsible representative to schedule the installation follow-up, according to page 19 of this manual, and basic instructions for use and application at no additional cost.
- **d)** The customer is responsible for transporting the delivered equipment to the installation site and for providing full power (208v/240v,) in the installation plan, and the customer is also responsible for any damage to the equipment caused by improper movement of the equipment or poor electrical installation.
- **e)** The warranty will cover component or manufacturing failures only, providing replacement parts as well as necessary servicing. Damage caused by lack of attention to the label warnings in the product and misuse will not be covered by warranty.
- **f)** Any need for replacement of parts must be analyzed and authorized by the Prática technical team, who will schedule a visit by an authorized service company on site for repair or replacement of parts.
- **g)** The use of service under the warranty will not justify any warranty extension, returns or changes of equipment.

#### REASONS FOR VOIDING THE WARRANTY

- **a)** Damages caused by transportation. The customer is responsible for inspecting the delivery of the equipment and engaging the reseller within 24 hours of delivery in the event of problems with the product.
- **b)** Any damage to the equipment, caused by issues arising from poor building electrical installation, irregularities or failure to comply with the local electrical code as well as the electrical specification sheet accompanying the oven.
- **c)** Use or installation not in accordance with the Installation Standards and the Operation Manual that accompanies the product, page 19 of this manual.
- **d)** Failure to observe installation details, in disagreement with the Installation and Operation Manual, such as: uneven surface, installation of the oven next to equipment that discharges grease, heat or solid particles, lack of air circulation or any similar that compromises the good ventilation of the equipment.
- **e)** Component damage and failure resulting from inadequate cleaning or lack of, such as: wetting or splashing water on the equipment's internal electrical components, using inadequate cleaning products, or letting dirt and grease build-up inside the equipment chamber.
- **f)** Attempts to repair or make changes by unauthorized technicians to the original installation condition, such as equipment mains, installation, and use of non-OEM parts regardless of damage or defect.
- **g)** Use of abrasive cleaning products that may stain, wear, scratch, or damage accessories or equipment components.
- **h)** Occurrences of electrical discharges resulting from acts of nature or voltage spikes caused by generators or energy utilities.
- i) Damage to equipment or accessories, such as: electronic boards, keyboards, refractory stones and other components; as a result of accidents, incorrect operation or handling, lack of cleaning or use in disagreement with the Installation and Operation Manual that accompanies the product.

#### NOTES AND RECOMMENDATIONS

- **a)** The operator (user) of the equipment must use the Installation and Operation Manual as a guide.
- **b)** Ensure that the electrical system is developed by a qualified and certified company.
- **c)** Natural wear of the equipment is not covered by warranty. To ensure productivity and extend the life of your equipment, it is critical to properly cleaning it according to the cleaning guide found on page 75 of this manual.
- **d)** Daily or periodic cleaning according to frequency of use is required in order to the equipment does not present problems caused by lack of cleaning. This can be an aggravating factor for equipment failure, and there will be no warranty coverage against it.
- e) For service on an equipment under warranty, the first step is to open a service ticket directly with Prática Technical Service via email: service@praticausa.com, text message or call: +1 (218) 748-8572.
- f) To contact our customer service team and share your comments and suggestions, please call: +1 (214) 584-6269 or email: info@praticausa.com

# EQUIPMENT ID (complete to facilitate technical calls)

MODEL:	VOLTAGE:
SERIAL#:	RESELLER:
TAX NOTF #:	PURCHASE DATE:

### INSTALLATION INSTRUCTIONS

#### **ELECTRICAL INSTALLATION**

 Always follow the installation recommendations in the instruction manual or the product spec sheet. The spec sheet is attached to the manual, and it is sent by email at the time of approval of your order, and is also available on our website (www.praticausa.com). If you have any questions, please contact Prática's Helpdesk:

## You may contact us via:

Phone, WhatsApp, or text: +1 (218) 748-8572

E-mail: service@praticausa.com

**Monday to Friday:** 6:00 AM - 7:00 PM CT **Saturday & Holidays:** 8:00 AM - 1:00 PM CT

Sunday: Closed

 All Prática ovens shall be installed with the required care to avoid problems and damages to the equipment and ensure its full use.



- · This equipment shall be installed by an authorized technician.
- · Grounding the oven is mandatory.
- Do not wet the power cord or socket.
- Keep the power cord away from heated surfaces.



- If the power cord is damaged, it shall be replaced only by authorized service personnel.
- · Only authorized technicians should open the equipment panel.

	FIT EXPRESS							
Region	Voltage (V)	Phases	Freq. (Hz)	Power (kW)	*Circuit Breaker (A)	Cable	So	cket
USA/	208	Single	60	6.2	20	3x10	NEMA	(I)
Canada	240	Siligle	60	7.0	30	AWG	6-30	
	FIT SM (Note: The Fit SM (Single Mag) is not recommended for frozen products)							
USA/	208	Single	60	2.7	15	3x14	NEMA	(·I
Canada	240	Sirigle	00	3.1	15	AWG	6-15	


<sup>\*</sup>Prática recommends installing a type D circuit breaker. The electrical installation must comply with local regulations.

#### INSTALLATION INSTRUCTIONS

**Note:** The equipment has an equipotential point connector for other equipment. Such connector aims to maintain multiple equipment with the same electrical power. It is not necessarily the grounding of a local connection. This connector is located on the back of the equipment and is identified with the following symbol.



**Note:** the oven must to be mounted only above countertop level.

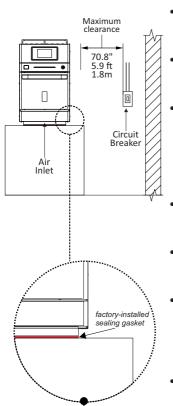

- It is recommended to use the cable gland to prevent movement of the power cable.
- If the oven voltage is 380 volts, a neutral cable shall be used (irrespective of grounding).
- Make sure that the electrical characteristics of the building comply with the specifications on the label located on the back of the equipment. The building's electrical installation is the responsibility of the customer.
- This unit shall be properly grounded to prevent electric shocks.
- The circuit breaker shall be located no more than 70.8" / 5.9 ft from the equipment.
- To meet the sanitary operating requirements, the equipment must be installed on a completely flat surface, with proper sealing between the oven and this surface.
- The equipment has a flat base and a factoryinstalled sealing gasket. No additional materials are needed to ensure the seal
   between the equipment and the counter. The only requirement is that the counter be absolutely flat.

#### **GENERAL INSTRUCTIONS**


- The oven shall be installed on a base or counter that supports its weight, approximately 147.7lbs.
- Do not obstruct the side air inlet and rear air outlet.
- The oven should not be positioned next to stoves, fryers, hot grills or other equipment that release grease, vapors and heat. Ventilation, electrical panel, and motor outlets shall be clear of these heat sources to prevent damage to the equipment's electrical system.
- The oven shall be installed in a level and ventilated place.
- Failure to install the equipment in an appropriate location may result in voiding the warranty.

# **INSTALLATION INSTRUCTIONS**


# **DIMENSIONS**

## **FIT EXPRESS**


FRONT VIEW

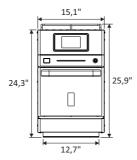


SIDE VIEW

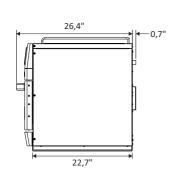

SIDE VIEW WITH DOOR OPEN

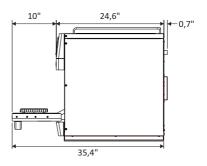


Chamber size	
Payload	0.45 cu.ft
Height	6.6"
Width	12.4"
Depth	13.4"

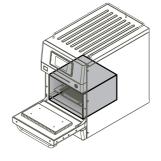

#### **GENERAL RECOMMENDATIONS**



 



 If residues accumulated inside the oven goes into combustion, keep the oven door closed, cut the power supply to the oven by turning off the oven's dedicated circuit breaker and unplug the oven from the socket.



• Do not use the oven to dry clothes or store utensils.




- Do not operate the oven door if it is damaged until it is repaired by a qualified person.
- If the power supply cuts off while the oven is in use, the food in preparation will be lost (saved recipes/oven information will not be lost).
- Do not cover or block any equipment's vent.
- Do not use the oven outdoors, which are exposed to time without shelter.
- Do not store food inside the oven when it is not in operation.
- Wait ten seconds to turn the oven on after starting the circuit breaker.



**Attention:** Whenever the oven is in operation, the **Speed Grill** must be correctly installed in the oven in its operating position.



Operating the oven without the **Speed Grill** may result in damage to the equipment, requiring technical service repair.

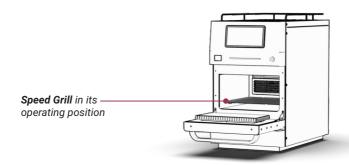


## FIT EXPRESS TECHNOLOGY

The *Fit Express* oven uses a combination of heating by high-speed impinged air and microwave energy to heat food faster than conventional methods.

## The figure below illustrates how the technology works.


- **1) Magnetrons** generate energy through the microwaves, which uniformly heat the water molecules in the food;
- 2) Internal heater resistances transfer thermal energy to the circulating air;
- 3) The stirrer distributes the microwaves evenly;
- 4) The impinged air is directed to the food;
- **5)** The **catalytic converter** leads the volatile organic compounds into carbon dioxide and water (CO2 and H2O);
- 6) The blower motor circulates air at high speed;
- 7) In parallel to all this, the microwaves penetrate the food to heat it.

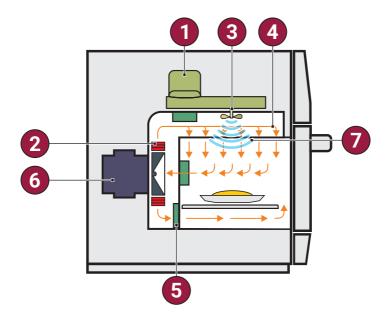

## **OPERATINGPRINCIPLES**

Microwaves are a type of radiant energy. Like radio waves, visible light, and infrared, microwaves are part of the electromagnetic spectrum, that is, it is a form of electromagnetic radiation. They are classified as non-ionizing radiation because unlike X-rays and Alpha, Beta and Gamma rays, their effects are strictly thermal and, therefore, do not alter the molecular structure of the item receiving them.

 The basic principle of microwaves is cooking by molecular vibration. They penetrate food superficially, to a depth ranging from 0.7" to 2.7", and heat the food by vibrating the water, fat, and sugar molecules in it. Heat is transmitted into the food by thermal conduction, demystifying the idea created that microwaves cooked food from the inside out.



**Fit Express** works by associating microwaves with hot air, which are directed to the food. The variables in the operation are the following:

- a) Operating time;
- b) Chamber temperature;
- c) Microwave power;
- d) Air speed.


Each scheduled operation (recipe) may be composed of eight steps and the variables mentioned above are included in each step.

**Temperatures:** Be aware that preparation times and their steps are short, so it is not possible to note clearly when the temperature changes in the chamber from one step to another or from one recipe to another. The temperature applied by the oven will be the one which the preheat was set up to, and the equipment is activated to maintain the preheat temperature between functions.

25

**Microwave:** Adjustable between 0% and 100% at every 30 seconds. E.g. for a 1 minute long recipe, with the microwaves programmed at 50%, they will have an effect on the food for 15 seconds, then they will stop for another 15 seconds and repeat this process in the next 30 seconds. That is, in 1 minute, they will run for 30 seconds. Microwaves have the function of heating food and do not require a specific means to propagate.

They are reflected by metals, but go through glass, plastics, and ceramics easily, and act on food by penetrating it.

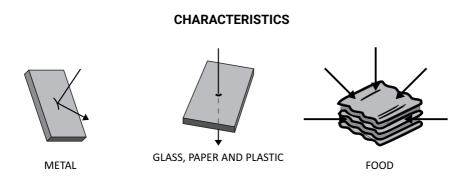

Plastic containers shall not be used in the *Fit Express* as these will incinerate with the heating of the chamber (see more on proper utensils on page 13).

**Operating time:** The microwave oven heats food from the outside in, and penetration rates will change according to the food composition. Therefore, we must calculate the time of preparation considering the food composition, the amount of food processed, and its density and thickness. The higher the quantity, density and thickness, the longer will be the time required for microwaves to act inside the food.

**Hot air speed:** The hot air directed over the food will be adjusted between 0% and 100% of the total speed. It is also responsible for the transmission of heat to food, although its main function is related to:

- **a)** The external aspect of the food, that is, its color. The higher the air speed, the darker (golden) the food will become;
- **b)** The texture or crunch. The higher the air speed, the greater will be the removal of water from the food surface, increasing its crunchiness.

#### RECIPE CREATION

When developing a recipe, all of the above variables should be factored in. Microwaves and air speed are the key components to a successful preparation.

At first, it is necessary to work only with the microwaves to reach the food's internal temperature. The microwave effect is more efficient early in the process. For frozen products, perform two- or three-step operations so that at the beginning, the product is defrosted with lower microwave levels and at the end of the process, the optimal color and crunchiness is obtained.

Later, combine the variations of the hot air speed to get the desired finish in terms of color and crunchiness. Remember that these variables also transmit heat to food.

Food weight, size and shape are key to the total preparation time.

After defining how the food will be prepared, it is critical to know that:

- **a)** The initial temperature variation of the food (frozen, cooled or at room temperature) will change the desired final product;
- **b)** The variation in the size or weight of the serving will also produce a food outside the standard established in the recipe;
- **c)** Considering that different materials will have different reactions with microwaves, changing the cooking utensil will interfere with the product's final aspect.

# **OPERATING INSTRUCTIONS**

After startup, choose your preferred language. See more about languages on page 61.

#### PRE-HEATING

**a)** *Fit Express* has two groups of pre-heating setups that can be used according to the need of each user or application.


## Example:


**Pre-heat group 1** can be used for breakfast or sandwich recipes and **Pre-heat 2** can be used for recipes for a lunch or dinner menu. The main purpose of this function is to organize menus that require different pre-heating temperatures. This way, the oven will pre-heat as needed by the end user to serve the menu for each time of day.

**CAUTION:** Recipes created in **Pre-heat 1** will not be shown on **Pre-heat 2**. The same will happen for recipes created in **Pre-heat 2**, which will not appear in **Pre-heat 1**.

- **b)** Turn on the equipment and choose between preheat groups 1 and 2.
- **c)** The following screen will display the CURRENT temperature, the SCHEDULED pre-heating temperature. The orange bar is gradually filled as the oven temperature increases.

**Note:** the timer only starts when the CURRENT temperature reaches the SCHEDULED temperature, so that the oven temperature is uniform throughout the chamber (see more on preheat on page 52).

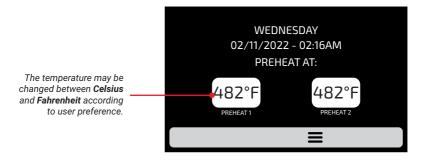

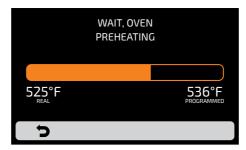

#### **EXECUTING A RECIPE**



ATTENTION: YOU MUST PROGRAM A RECIPE OR LOAD A SERIES OF RECIPES IN ORDER TO FOLLOW THE INSTRUCTIONS BELOW.

**a)** After pre-heating, select the desired GROUP. Swipe your finger over the screen to view all groups.

**Note:** The screen will always roll vertically.



**b)** All RECIPES for the selected group will be displayed. Press on the desired recipe.



- To return to the GROUPS screen, press the button: 🕋 .
- Swipe your finger 🥱 over the screen to view all available recipes.
- Make sure you always have food inside the oven when running a recipe, otherwise it will cause damage to the equipment

29


c) The recipe will be executed immediately.



- The screen will display the group name, recipe name, operation status (in progress or paused) and the time remaining to complete the recipe.
- **d)** It is possible to check the **CHAMBER ELEMENT** temperature by pressing the **1** button.
- e) If you want to cancel the execution of a recipe, press the utton.



**f)** If the equipment's door is opened, the operation will be paused. After closing the door, the operation will resume by pressing the button.

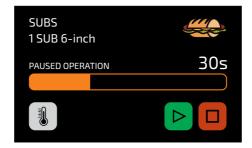

**g)** If the recipe programmer adds information in one of the steps, such as: "ADD TOMATOES," the recipe will be paused and the description of the information will be displayed next to the PLAY button, as shown in the image:



- h) Press the button to resume execution.
- i) Upon completion of a recipe, the following options will be available:
- Cook/Brown more: Activates the microwaves and hot air for the time pre-determined when the recipe was created.
- **Brown more:** Only triggers hot air for the time predetermined when the recipe was created.
- **Cook more:** Only triggers microwaves for the time predetermined when the recipe was created.
- Repeat recipe: Repeats the same recipe chosen by the user.



• In "Cook/Brown more," "brown more" and "cook more" the time will be set at the time of creating the recipe.

 The four options mentioned above can be disabled so that they do not appear in any recipe. Learn more in the User Settings block: Edit Access (see page 63).

## Example of brown more in action:



#### **ACCESSING THE OPTIONS**

- a) To access the settings at any time, press the icon found in the fixed menu bar.
- **b)** The options screen shows information such as: chamber's current temperature, manual mode, favorites, daily cleaning guide and settings.

**Note:** Manual mode and favorites are only shown if enabled by the administrator (see page 63).



- c) Pressing the icon again will return to the recipe group screen.
- d) Pressing the icon will take you to the Pre-heating selection screen again.

## **USER SETTINGS**

**a)** In the options screen, click the icon. The screen to enter the user password will be displayed.



**b)** The default password for access to the settings is 456789. The password can be changed (see page 62).



c) The user settings screen consists of the items below, and swipe your finger over the screen to see more options. Please understand in detail each item on the following pages.





#### **USER SETTINGS: EDIT GROUPS**

**Note:** The oven has two pre-heating temperatures as shown on **page 28**. After pre-heating, the oven will show the recipes for the selected preheat group. Recipes configured in group 1 will only be available when **preheat 1** is executed, and the same applies to group 2.

a) To edit groups, press the icon and the groups screen will appear. The icon to create a new group will be at the top.



**b)** Create a new group or select an existing group that you want to edit. You can have up to 16 groups in total. Swipe your finger over the screen to view all groups.



**c)** The options available after choosing between editing or creating a group are:



- **Edit Name:** Changes the group name. You can use letters, numbers, or special characters.
- Edit Image: Changes the image in the group icon.
- **Delete Group:** Deletes all information for the selected group, including recipes.
- Delete Recipes: Deletes previously selected recipes.
- **Arrange:** Allows you to sort the location where the group appears among existing groups.
- **Set Group Temperature:** Changes the group's pre-heating temperature. Note: recipes configured in group 1 will only be available when preheat 1 is selected, and the same applies to group 2.

 
#### **EDIT GROUP NAME**

a) Selecting the edit name option will display the following screen:




**b)** By clicking on **&123** and **ABC** (1/1 and 1/2) the screen will toggle between letters and numbers/special characters.





#### **EDIT GROUP ICON**

- a) *Fit Express* has an icon gallery that allows the user to exchange the images of their groups. Press the icon.
- **b)** A screen with the icon library will be displayed. Navigate through the groups and select the desired icon. You also can keep the first letter of the group name as an icon by clicking the **ABC** icon. Swipe your finger over the screen to view all icons.

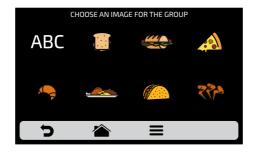

For example, if your group is called SNACKS, the icon for that group will be "S."



### **DELETE RECIPES IN A GROUP**

a) The delete recipes option will only allow you to delete recipes from the previously selected group. Press the button. You can delete a selection of recipes or all of them in the next screen.



**b)** Select the recipes you want to delete, will indicate the ones selected, then click on the trash can on the fixed bar.





A message will appear; to confirm the deletion of recipes, click on the "DELETE SELECTION" icon. Click on "CONTINUE SELECTING" to expand your selection.

c) The following message will appear after clicking on the icon to delete all:





To confirm, click are or to cancel and return, click .



## **DELETE GROUP**

a) CAUTION: When choosing the option to delete the group, all information regarding the group will be lost: recipes, steps and other information. And if the user does not back up the information (see page 54) it will not be possible to retrieve this information.



options screen.

b) Press the button to confirm your choice or to return to the



### **ARRANGE GROUP**

a) The arrange function allows you to change the sequence in which groups will appear on the screen.


This screen consists of three buttons:



- Place at the top of the list: The group is moved to the beginning of the group list.
- Place at the end of the list: The group is moved to the end of the group list.
- **Choose place in the list:** The operator will be directed to the groups screen to choose the location they want in the list.
- **b)** To change the position of a group, simply press on the group to select it and slide to the desired position. Press to save the change.
- **c)** If the replacement is done horizontally (1-2, 3-4, 5-6 and 7-8) the two groups in question will change position without changing the order of the other groups, as shown in the image below:



**d)** If the substitution is done randomly, once the position is selected, the groups will be sorted sequentially (1, 2, 3, 4, 5, 6, 7, and 8), as shown in the image below:

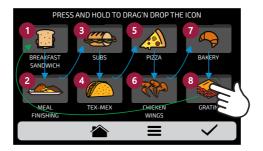

## **SET GROUP TEMPERATURE**


a) Choose the desired pre-heat temperature for the selected group

**Note:** Recipes configured in group 1 will only be available when preheat 1 is selected, and the same applies to group 2.




# **USER SETTINGS: EDIT RECIPES**

a) To edit recipes, press the icon. The Groups screen will be available. Choose which group you want to change recipes for. Swipe your finger over the screen to view all groups.

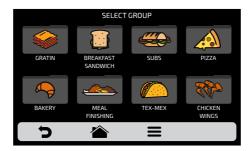

**b)** When accessing recipes, you can edit an existing one or create a new recipe.

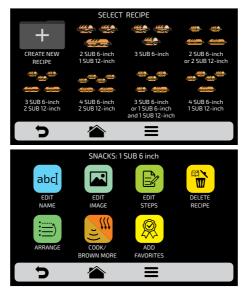

The options available after choosing to edit or create a recipe are:

- **Edit Name:** changes the name of the recipe by using letters, numbers or special characters.
- Edit image: changes the image or icon that represents the recipe.
- Edit Steps: accesses the step editing options for the selected recipe.
- **Delete Recipe:** deletes all information for the selected recipe, including the steps.
- **Arrange:** allows the change of a recipe's position among the other recipes in the group.
- Cook/Brown More: changes the time of the heat/brown more function.
- Add/Remove Favorites: adds or removes the recipe from the favorites list.


## **EDIT RECIPE NAME**

 a) Selecting the edit name option will display the following screen:



**b)** By clicking on **&123** and **ABC** (1/1 and 1/2) the screen will toggle between letters and numbers/special characters.





#### **EDIT RECIPE IMAGE**

a) Fit Express has an image library that allows the user to change recipe icons/pictures. Press the icon to edit and then choose between or PICTURES for the recipes displayed.

Choose icons for stylized food images




Choose pictures for real food images




- **b)** To access the next page of recipes, swipe your finger  $\circlearrowleft$  over the screen to view all recipes.
- **c)** Browse the image library groups to select the desired icon or press the ABC button to turn the first letter of the recipe name into an icon. As shown in the example below:



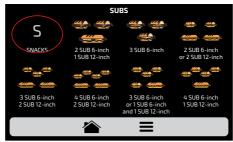


### **EDIT RECIPE STEPS**

**a)** Each recipe can have up to 8 steps, and the active steps will appear in green on the editing screen. All other steps will be transparent, as shown below. Click on a step to edit it.

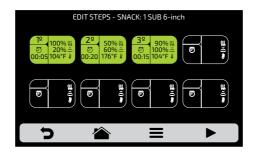

- b) The following information is required for each step:
- 1 Speed of hot air;
- 2 Amount of microwaves (in %);
- 3 Temperature;
- 4 Amount of time.

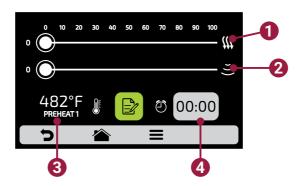

**c)** To change the speed of hot air and microwaves, simply drag your finger over the bar of each parameter or click on the desired location in the bar.





- **d)** To set the time, click on the 00:00 icon. Using the keyboard that will appear on the opposite side, set the desired value and click  $\checkmark$ .
- e) To set the temperature, click the  $\frac{482^{\circ}}{2}$  icon. Using the keyboard will appear on the opposite side, set the desired value and click  $\checkmark$ .



**f)** Click on the button to access the options to edit the step parameters, which are:




**g) To add information** that will be displayed at the end of the step during the recipe execution. Click on the icon.

## h) Activate and inactivate the step:

- A Only the active steps of a recipe will be executed. An inactivated step is not deleted, only hidden.
- To delete the step, you must enter the 00:00 value for the time parameter.



i) After you complete editing a step, use to return to the steps screen and edit, create a new step, or test the active steps.

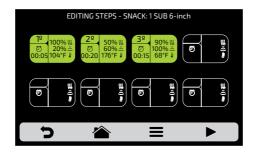


j) To test it, click on the icon on the fixed bar of the steps screen. Before proceeding with the test, make sure there is food inside the chamber.



k) Use to return to the recipe editing options.

### **DELETE RECIPE**

a) Press to delete the recipe and press the button to confirm the deletion or to return to the recipe editing options

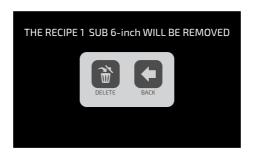

#### **ARRANGE RECIPES**

a) The arrange function allows you to change the sequence in which recipes will appear on the screen.

This screen consists of three buttons:





Place at the top of the list: The recipe moves to the top of the group list.




**Place at the end of the list:** The recipe moves to the end of the group list.




**Choose place on the list:** The operator will be directed to the recipe screen to choose the position they want.

- **b)** To change the position of a recipe, simply press on the recipe to select and slide  $\sim$  to the desired position. Press  $\sim$  to save the change.
- c) If the replacement is made vertically (1-2, 3-4, 5-6, and 7-8) the two recipes in question will change position without changing the order of the other recipes, as shown in the image below:

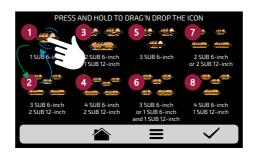

**d)** If the replacement is done randomly, once the position is selected, the recipes will be sorted sequentially (1, 2, 3, 4, 5, 6, 7, and 8), as shown in the image below:

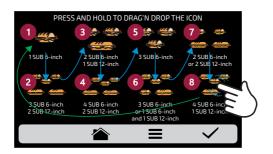

e) Use to return to recipe editing options.

### COOK/BROWN MORE

**a)** The **cook/brown** more function is defined by recipe, i.e. it is not a fixed value for all recipes so the user can define the time they want for each option.



# Keep in mind that:

- Brown more only hot air is triggered;
- Cook more only microwave is activated;
- Cook/brown more alternates between heating and browning.

**b)** To set the time, simply click on the location of the value as shown on the display.



c) Use the keypad to enter the time and click  $\checkmark$  .



- d) The cook/brown more feature can be disabled in the edit access setting (see page 63).
- e) Use to return to the recipe editing options.

### ADD / REMOVE FAVORITES

- **a)** The **favorites** function can be accessed via the options key on the fixed bar, which will be explained in detail on **page 70**.
- **b)** To bookmark the recipe, click on the licon. A small ribbon will be added to the top left corner of the recipe icon.





c) To remove the recipe from favorites, repeat the process. On the recipe editing options screen, the remove from favorites icon will appear: Q , by clicking on it, the gribbon will disappear from the icon and the recipe is removed from the favorites list.




### **USER SETTINGS: PRE-HEAT**

- a) Editable parameters in pre-heat are:
- Temperature Preheat 1.
- Temperature Preheat 2.
- Preheat time: the purpose of this function is to set the time to allow for an uniform temperature on the oven chamber after pre-heating, as this time guarantees the good performance of the equipment in the execution of the initial recipes of an operation.
- b) The 10 / 11 button enables/disables Temperature Preheat 2. When disabled, all settings related to Temperature Pre-heat are hidden.



c) To edit the values using the keypad, press the 00:00 and 000°F icons.

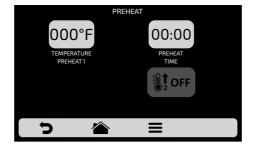

### **USER SETTINGS: CURRENT TEMPERATURE**

**a)** The current temperature screen : is informational only. It allows to check the temperature of the chamber resistance.



## **USER SETTINGS: CELSIUS/FAHRENHEIT**

a) To change the temperature format between Celsius and Fahrenheit as displayed in the oven, click on the con in the user settings, and set the temperature format you want.



## **USER SETTINGS: USB**

a) Press the button. The functions available on USB are: import and export.



- **b)** When selecting one of the functions, the message: "Insert the USB stick and wait for recognition" will appear.
- **c)** After recognition, the user will be redirected to the options of the function they chose earlier:

Import: Import all, import groups, or import settings.



- Import All: Transfers all groups, recipes, and user settings from the USB stick to the equipment.
- Import groups: Transfers all groups and recipes from the USB stick to the equipment.
- Import settings: Transfers the settings from the USB stick to the oven.

**Imported settings functions:** date and time, recipe check, heating and browning status, auto import, favorites, manual mode, operator mode, repeat recipe, date format, time format, hour format (AM/PM), language, preheat 1, pre-heat 2, enable pre-heating, sound, pre-heating time and temperature unit.

**Note:** When importing **groups, recipes or settings** from a USB stick to the equipment, all information in the oven will be deleted and replaced with the imported information.

**Export:** Export all, export groups, or export settings.



**Export All:** Transfers all groups, recipes, and user settings from the oven to the USB stick.

**Export groups:** Transfers groups and recipes from the oven to the USB stick.

**Export settings:** Transfers the settings from the oven to the USB stick.

**Functions with exported configuration:** date and time, recipe check, heating and browning status, auto import, favorites, manual mode, operator mode, retry recipe, date format, time format, time period (AM/PM), language, preheat 1, preheat 2, enable preheat, sound, preheat time, and temperature unit.

**Note:** When importing **groups, recipes or settings** from the oven to the USB stick, all information in the USB stick will be deleted and replaced with the imported information.


- **d)** If an error occurs, the message displayed will be: "There was an error during import/export, please remove the USB stick and restart the process".
- e) Use to return to user editing options

### ACCESS TO THE USB PORT




## **USER SETTINGS: WI-FI**

a) To connect to a Wi-Fi network, press the key to access the setup screen. Swipe your finger over the screen to view all available networks

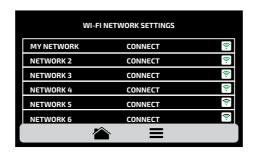


**b)** Click the Wi-Fi network you want to connect to and then **enter the password:** 

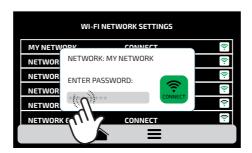

**c)** Use the keyboard to enter the password and confirm by clicking the key.

The screen below shows the oven is connected to the desired network:

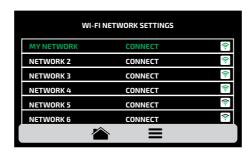


**d)** If the password entered is incorrect, the following message will appear on the screen: "ERROR! PLEASE CHECK YOUR NETWORK OR RE-ENTER THE PASSWORD." Please try again.



**Note:** After selecting the Wi-Fi network for the first time, the pre-heating menu will be automatically displayed. In the future, the user must use the Wi-Fi icon in the settings menu if the user wants to change the network.

# **USER SETTINGS: WEB APP (IOK - INTERNET OF KITCHEN)**

- **a)** Our Web App allows you to create, edit and upload/download recipes from the website (new.praticaiok.com).
- **b)** Press the key to use our online platform and visit new.praticaiok.com to use your PIN code.

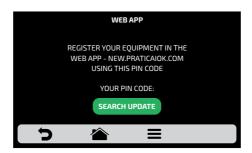


• All recipes created in the Online Platform (new.praticaiok.com) can be sent directly to the oven. Once sent, press the icon in the oven update the oven recipes as per the following image:





- Press the "Yes" button to proceed with the update or "No" to return to the settings menu.
  - The download is completed.
  - NO Sends you back to the settings menu.
- · Wait for the update bar to complete

- Note: Once the update is complete, all recipes created through the website (new.praticaiok.com) will be available on your equipment
- **c)** When connecting to the **online platform**, the following screen will appear:

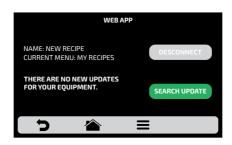

• To disconnect from IOK, press the DESCONNECT key.

### **USER SETTINGS: CUSTOMER SUPPORT**

**a)** On the **Customer Support screen** , you will find a QR CODE with all contact information. Using the camera on your mobile, scan the QR CODE to access the information.

The Customer Support screen is the only screen that has horizontal scrolling, swipe you finger to view the QR CODE for all regions.



### **USER SETTINGS: EXPORT MENU**

a) The Export Menu function is a shortcut for direct export to the USB drive or the online platform (IOK).



- **USB:** exports the menu directly to the USB stick.
- WI-FI: exports the menu directly to the online platform (IOK). Note: This option requires the device to be connected to a Wi-Fi network and registered on the online platform (see more on page 58).
- **b)** Use **t** to return to the user settings options.

# **USER SETTINGS: SYSTEM**

a) The system screen consists of the following items. Understand fully each item on the following pages.



#### SYSTEM: LANGUAGES

**a)** To change the language , simply click on the icon to choose the desired language. Swipe your finger over the screen to view all languages available.



**b)** Use **t** to return to the user settings options.

### SYSTEM: DATE/TIME

Note: You can only change the date and time if the device is disconnected from the Wi-Fi network.

**a)** It is possible to adjust the date, time and format that should be presented to the user, according the following standards:

**EUROPE:** DD/MM/YYYY **HOUR:** 24H FORMATTING **EUA:** MM/DD/YYYY 12H FORMATTING

ISO: YYYY/MM/DD

**b)** Click on and to edit the date and time, respectively.

**c)** Press to change the date/time format and the following screen will appear, where you can choose the date and time format, and click on to confirm and return to the options.



### SYSTEM: CHANGE PASSWORD

a) You can change the user password by simply entering the new password and then confirm it by clicking OK



- b) Please contact the technical support if you forget your password (see page 84).
- 62 c) Use to return to the user settings options.

### SYSTEM: RESTORE ORIGINAL SETTINGS

a) ATTENTION: The factory reset option will delete all groups and recipes, in addition to user-defined settings. Make sure to backup your information in a USB stick before proceeding. After you enter the password and launch: YOU WILL NOT BE ABLE TO RETRIEVE YOUR INFORMATION.



**b)** Use **to** return to the user settings options.

## SYSTEM: EDIT ACCESS

**a)** Edit access corresponds to the function that blocks any functions operators have access to.

**For example,** if you want favorite functions and manual mode to be never accessed by operators, simply click on both, which will turn dark gray to indicate they are locked until you unlock them.





c) The Favorites Only, Recipe Verification, and Auto Import functions only appear on the Edit Access screen. The details of these functions are as follows:



Favorites Only: When you enable this function, only favorite recipes will be displayed on the initial recipe execution screen, allowing the execution to be performed with just one click.



**Recipe Verification:** When you enable this function, a message will appear to ask if there is food in the equipment, which will always be displayed before starting a recipe.



Confirm by pressing and the recipe execution will proceed as normal.

Pressing will stop the recipe.




**Auto Import:** Enabling this function every time the device is turned on will automatically import recipes from a USB stick.

Note: A message will appear asking for the USB stick to be inserted.



### SYSTEM: INFORMATION FROM THE MANUFACTURER

a) *i* has information on *FIT Express* firmware version, series and date of manufacture.

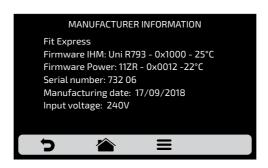

#### SYSTEM: SYSTEM UPDATE

a) Press the 📵 key and choose the option: া 🖽

Note: The option should only be used by an authorized technician.

b) Select the Wi-Fi option.



**c)** When a new software update is available, the following screen appears. Press the "Yes" button to proceed with the update or "No" to return to the settings menu.



- The download takes place in the background and the user returns to the previous screen.
- NO Sends you back to the settings menu.
- **d)** The green bar will flash while the download takes place in the background. If you press the button, the previous screen will appear and the download will take place in the background.



**e)** Restart the equipment after the download is complete.creen will appear and the download will take place in the background.



Attention: If you do not restart the equipment now, the update will be compiled next time you turn the equipment on.

YES Restarts the equipment.

NO Sends you back to the settings menu.

**f)** If no update is available, the following message will be displayed on the screen:

"At the moment, there is no update available for your equipment. When an update is available, the symbol below will be displayed at the right upper corner of the screen." ipment now, the update will be compiled next time you turn the equipment on.



**g)** If an error occurs during the update, the following message will appear on the screen:

"An error occurred during the system update. Would you like to restart the process?"



YES Restarts the update process.

Sends you back to the settings menu.

### **SYSTEM: VOLUME**


a) On the volume screen (; you can adjust the sound.



**b)** Use **t** to return to the user settings options.

# **USER SETTINGS: NETWORK SETTINGS**

**a)** On the Network Settings screen, you can choose the connection type: DHCP (automatic) or STATIC IP (manual).

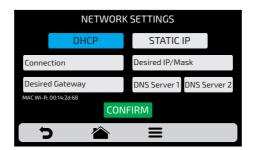

**b)** Use **t** to return to the user settings options.

### **FAVORITES**

a) The Favorites functionality acts as a shortcut. This function allows easy access to your most used recipes. To access this function, simply press the option button on the fixed menu bar and then press the button.





- c) See how to add or remove a recipe from the favorites list on page 50.

### **SOUND ALARMS**



• At the end of a recipe, the alarm will sound to indicate the end of operation.



• If the oven door is left open for more than 30 seconds, the alarm will sound to alert the user.



• Caution: If the audible alarm sounds continuously, the equipment is not functioning properly. Turn the equipment off or disconnect the power cord and read the instruction manual before operating.

## **MANUAL MODE**

- **a)** The **Manual mode** can be used to test new recipes or run recipes quickly. It is possible to define and execute a recipe's step and if your test result is a pass, it is possible to turn it into a recipe at the end of the operation.
- b) To access the manual mode, click the radio button. On the options screen, press the icon.



- c) Set the parameters for time, temperature, hot air speed and microwave.
- d) Press the button to start operating in the manual mode




**e)** Upon completion of the operation, the copy parameters icon will be enabled ightharpoonup .




**f)** Copy parameters allows the user to carry the parameters defined in **manual mode** to the **editing groups and recipes**, i.e. by clicking on the icon, it will be necessary to enter the user password for access to the settings.



**g)** After entering the user password, choose between creating a new group or allocating the parameters carried over into a new recipe in an existing group.

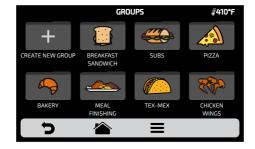

**h)** Define the name and the image of the new recipe and choose which position (step) you want to allocate the transported information to.

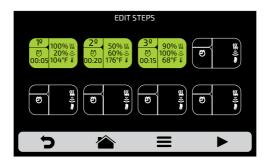

i) To finalize, define the other steps of the recipe, if desired.

### **DAILY CLEANING GUIDE**

- a) To assist in cleaning the *Fit Express*, use the **daily cleaning guide**. It can be accessed in the **options** screen, then click on the button. Follow the steps on the screen carefully.
- **b)** To clean your *Fit Express* oven, we recommend using the *Oven Cleaner* (degreaser) and the *Oven Protector* (antifat) from *Prática*.



- **c)** By pressing the button on the screen, you can watch a video at each step of the cleaning.
- 1°: Open the oven door and allow the oven to cool down to the temperature indicated on the panel. Click the arrow to proceed:



2°: Remove the speed grill and the catalytic converter and put them on the sink. Click the arrow to proceed:



**Note:** Immediately after completing step 2, the following message will appear

on the screen:



If you click on , a screen for cleaning the catalytic converter will be added to step 3; if you click on , the cleaning will go on without the additional step.

**Caution:** After cooling the oven and before applying the fat remover, wipe the surfaces of the chamber with a damp cloth to decrease the temperature.


**3°: 1/2** - Apply Oven Cleaner on the speed grill and let it soak while you perform the next steps. Click the arrow to proceed:



3°: 2/2 - Soak the catalytic converter in a water and soap solution when performing the regular cleaning. Click the arrow to proceed:



**4°:** Apply the Oven Cleaner to the chamber walls and in the inside of the door and let it soak for 5 minutes.

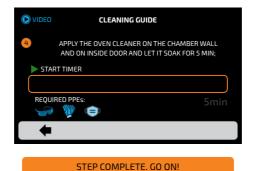

The alarm will sound and the next screen will be released after 5 minutes.

Click on to proceed

**5°:** Use a non-abrasive sponge to clean the whole chamber and ceiling. Click the arrow to proceed:



**6°:** Clean the chamber with a wet cloth to remove excess, then wipe it with a dry towel. Click the arrow to proceed:



**7°-1/2:** Apply vinegar through the whole oven's chamber and the door and spread it evenly. Click the arrow to proceed:



7°-2/2: Clean the chamber with a wet cloth to remove any vinegar excess, then wipe it with a dry towel. Click the arrow to proceed:



**8°:** Apply Oven Protector through the whole oven's chamber and the door and spread evenly with a paper towel. There is no need to rinse. Click the arrow to proceed:



9°-1/2: Use a non-abrasive sponge to remove the most adherent stains from the Speed Grill. Click the arrow to proceed:



9°-2/2: Rinse the Speed Grill and the catalytic converter if both were cleaned. Click the arrow to proceed:



**10°:** Fit the catalytic converter and the Speed Grill properly. Click the arrow to proceed:



11°- 1/3: Remove the air filter in the front of the oven and let it soak in a container with water and detergent. Click the arrow to proceed:



11°- 2/3: Remove the stickiest dirt with running water and clean with a non-abrasive sponge with detergent. Click the arrow to proceed:




11°- 3/3: Rinse the filter with running water, dry it and fit it onto the oven. Finalize the cleaning by clicking the arrow:



#### CATALYTIC CONVERTER CLEANING GUIDE

**a)** Remove the catalytic converter by vertically moving upwards and then pull it back as shown in the image:

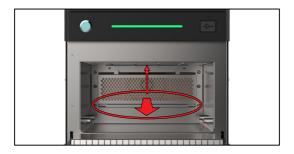

- **b)** For a proper cleaning, soak the catalytic converter in warm water with mild detergent.
- c) After 15 minutes in solution, rinse well and reinstall.
- d) If necessary, repeat the process until the converter is clean.

**Note:** The catalytic converter does not need to be cleaned in every cleaning. We recommend a weekly check and cleaning as required for each application.

## AIR FILTER CLEANING GUIDE

- a) To access the air filter, open the oven front rail.
- **b)** Next, remove the filter by pushing it backwards using the filter tabs as shown below:



- **c)** For a proper cleaning, wash the filter with running water with mild detergent.
- Note: The air filter does not need to be cleaned in every cleaning. We recommend a weekly check and cleaning as required.

# LIGHTBAR (LED)

**a)** The *Fit Express* has a light bar that indicates the process in progress with different colors, according to the table below:



FUNCTION	COLOR	STATE
Starting/Standby		Flashes
Pre-heating		On
Temperature control		On
Cleaning		On
Recipe in execution		On
Recipe finalized		Flashes
Failure		On
Error		On

## **ALERTS AND ERRORS: POSSIBLE SOLUTIONS**

- **a)** The *Fit Express* is programmed to warn of any possible errors and alerts that may occur during operation.
- **b)** A flag will appear over the  $\blacksquare$  options icon; it will be yellow for alerts (  $\triangle$  ) and red for errors (  $\triangle$  ).
- c) See how to proceed in each case below:



#### ALERTS

a) Click the equipment options icon



**b)** The **options** screen will bring a description of the alert instead of the chamber temperature:

#### **WARNING - CHAMBER SENSOR FAILURE**

**c)** Follow the instruction as described on the screen. In this case, switch the oven off and on again using the panel button:



**Note:** If you press the **on/off** button the following message will be shown on the screen:



**Note:** It is also possible to press the **on/off** button for 3 seconds to shut down the equipment directly.

**d)** After turning up the equipment, if the error persists, call Prática Technical Support (see page 84).



## **ERRORS**

**a)** In case of multiple unsuccessful attempts to reset, the alert will become an error and you will need to contact Technical Support *(see page 84)*.



#### **TABLE OF ALERTS AND ERRORS**

Component	It becomes an alert when	It becomes an error when	Sound alarm of error
Inverter	rter No communication -		Off
Inverter	-	More than 10 reboot attempts	On
Magnetron fault	15 seconds without reaching current	-	On
CAN network communication	-	Cables disconnected or defective	On
Chamber sensor	ensor - Sensor inactive		On
Temperature on the panel	149°F to 176°F	Above 176°F for 10 minutes	On

You may call us to provide feedback, offer suggestions, or receive technical support:

**Phone:** +1 214 584-6269

**WhatsApp text or call:** +1 218 748-8572

**Email:** service@praticausa.com

Monday to Friday: 6:00 AM - 7:00 PM CT Saturday & Holidays: 8:00 AM - 1:00 PM CT

Sunday: Closed











FIT EXPRESS - ENGLISH | PPI CODE: 743003 INSTALLATION AND OPERATION MANUAL JULY 2025 - REVISION 01

# Pritica

# PRÁTICA PRODUCTS, INC. USA

911 E State Hwy 121 Business, #101 Lewisville, TX 75057 Phone: +1 214 584-6269 www.praticausa.com info@praticausa.com

# PRÁTICA PRODUTOS S.A. BRAZIL

Rodovia BR 459, Km 101 S/N 37.556-140, Pouso Alegre - MG Telefone: +55 35 3449-1235 pratica@praticabr.com